

Quick Set-Up Guide for Optional/Additional Model 28106 Slim DECT 6.0 Cordless Handset



for use with Systems
28115 and 28118 Series

Important Information

NOTICE: This product meets the applicable Industry Canada technical specifications. Operation is subject to the following two conditions: (1) This device may not cause interference, and (2) This device must accept any interference, including interference that may cause undesired operation of the device.

The equipment must be installed using an acceptable method of connection. The customer should be aware that compliance with the above conditions may not prevent degradation of service in some situations.

Repairs to certified equipment should be made by an authorized Canadian maintenance facility designated by the supplier. Any repairs or alterations made by the user to this equipment, or equipment malfunctions, may give the telecommunications company cause to request the user to disconnect the equipment.

Users should ensure for their own protection that the electrical ground connections of the power utility, telephone lines and internal metallic water pipe systems, if present, are connected together. This precaution may be particularly important in rural areas.

CAUTION: Users should not attempt to make such connections themselves, but should contact the appropriate electric inspection authority, or electrician, as appropriate.

NOTES: This equipment may not be used on coin service provided by the telephone company.

Interference Information

This equipment generates and uses radio frequency energy which may interfere with residential radio and television reception if not properly installed and used in accordance with instructions contained in this manual. Reasonable protection against such interference is ensured, although there is no guarantee this will not occur in a given installation. If interference is suspected and verified by switching this equipment on and off, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient the radio/television receiver's antenna, relocate the equipment with respect to the receiver, plug the equipment and receiver into separate circuit outlets. The user may also wish to consult a qualified radio/television technician for additional suggestions. This equipment has been fully tested and complies with all limits for Class B computing devices pursuant to part 15 FCC Rules and Regulations.

Hearing Aid Compatibility (HAC)

This telephone system meets FCC/Industry Canada standards for Hearing Aid Compatibility.

FCC RF Radiation Exposure Statement

This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body. This transmitter must not be co-located or operated in conjunction with any other antenna or transmitter."

THOMSON
images & beyond

Introduction

CAUTION: When using telephone equipment, there are basic safety instructions that should always be followed. Refer to the **IMPORTANT SAFETY INSTRUCTIONS** provided with this product and save them for future reference.

IMPORTANT: Because cordless phones operate on electricity, you should have at least one phone in your home that isn't cordless, in case the power in your home goes out.

If you have purchased an extra handset apart from your original purchased unit you may find a detailed description of its functions in the User's Guide provided with your original purchased unit.

If you have purchased an extra handset that is not of the same type as your original handset you may still use the original User's Guide to help explain the new handsets basic functions and options.

Installing the Handset Battery

NOTE: You must connect the handset battery before use. De-registration cancels registration. During the de-registration process, keep the handset near the base.

CAUTION: To reduce the risk of fire or personal injury, use only the Thomson Inc. approved Lithium battery model 5-2770 or 5-2762, which is compatible with this unit.

1. Locate battery and battery door which are packaged together inside a plastic bag and are separate from the handset.

2. Locate the battery compartment on the back of the handset.

3. Use the touch-tone pad to select 1 for YES or 2 for NO. Or use the vol/CID (▼ or ▲) button to scroll to 1YES or 2NO.

NOTE: To ensure proper battery installation, the connector is keyed and can be inserted only one way.

WARNING: It is not recommended that a handset be de-registered unless absolutely necessary because once a handset is de-registered, that handset's telephone features cannot be used until the handset is re-registered.

4. Select NO, if you do not want to de-register.

5. If you select YES, press the menu ok/mute button and **MOVE NEAR TO BASE** displays for 2 seconds, then **CONFIRM? 1YES 2NO** appears in the display.

6. Press the touch-tone pad to select 1 for YES or 2 for NO, or use the vol/CID (▼ or ▲) button to scroll to 1YES or 2NO.

7. If you select YES, press the menu ok/mute button to confirm. **DE-REGISTER...** shows in the display. You will hear a confirmation tone. Then **HANDSET X Deregistered** shows in the display to confirm the handset is deregistered.

NOTE: When you complete the de-registration process, **HANDSET NEEDS REGISTRATION** shows in the display. To use the handset, you MUST re-register the handset using the Registration process.

De-Registration

NOTE: You must connect the handset battery before use.

De-registration cancels registration. During the de-registration process, keep the handset near the base.

From the Handset Setup Menu:

1. Press the vol/CID (▼ or ▲) button to scroll to the **Deregistration** sub-menu.

2. Press the menu ok/mute button to enter the menu. **Deregistration 1YES 2NO** shows in the display. The default setting is 2NO.

3. Use the touch-tone pad to select 1 for YES or 2 for NO. Or use the vol/CID (▼ or ▲) button to scroll to 1YES or 2NO.

NOTE: To ensure proper battery installation, the connector is keyed and can be inserted only one way.

WARNING: It is not recommended that a handset be de-registered unless absolutely necessary because once a handset is de-registered, that handset's telephone features cannot be used until the handset is re-registered.

4. Select NO, if you do not want to de-register.

5. If you select YES, press the menu ok/mute button and **MOVE NEAR TO BASE** displays for 2 seconds, then **CONFIRM? 1YES 2NO** appears in the display.

6. Press the touch-tone pad to select 1 for YES or 2 for NO, or use the vol/CID (▼ or ▲) button to scroll to 1YES or 2NO.

7. If you select YES, press the menu ok/mute button to confirm. **DE-REGISTER...** shows in the display. You will hear a confirmation tone. Then **HANDSET X Deregistered** shows in the display to confirm the handset is deregistered.

NOTE: When you complete the de-registration process, **HANDSET NEEDS REGISTRATION** shows in the display. To use the handset, you MUST re-register the handset using the Registration process.

Receiving an Intercom Call

When you receive an intercom call, your handset beeps. To answer the call press the del/conf/intercom button, talk or speaker button.

Advanced Intercom Features

Receiving an Incoming Call During an Intercom Call

If you receive a telephone call during an intercom call, the intercom call is immediately terminated and both handsets ring. Either handset user may press the talk or speaker button to answer the call.

Using Intercom with External Telephone Calls

During a telephone call, you may use the intercom/paging function to page another handset and have an off line, private (two-way) intercom conversation. You may also have a three-way conversation between the external caller and the handsets, or you may transfer the external telephone call to another handset.

NOTE: Before you intercom/page another handset, you must decide whether you want to create a two-way or a three-way conversation.

Global De-registration

If one or more handsets becomes lost, you should de-register all handsets to ensure proper system operation. Follow the steps below to de-register all handsets at the same time.

Extra Charging Cradle

1. During an external call, press the del/conf/intercom button, and use the touch-tone pad to enter the handset number you want to call.

WARNING: It is not recommended that a handset be de-registered unless absolutely necessary because once a handset is de-registered, that handset's telephone features cannot be used until the handset is re-registered.

NOTE: The receiving handset presses the del/conf/intercom button to answer the intercom call. Both intercom users may speak privately. The external caller will not hear the intercom conversation.

The provisions of this written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation, and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties and other rights and remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.

If you are unable to find a qualified servicer for out of warranty service, you may write to:

Thomson Digital Technologies Ltd.
c/o Thomson Inc.
P.O. Box 0944
Indianapolis, Indiana, U.S.A., 46206-0944

Attach your sales receipt to this booklet for future reference. This information is required if service is needed during the warranty period.

PURCHASE DATE _____
NAME OF STORE _____

Two-Way Calling

1. During an external call, press the del/conf/intercom button, and use the touch-tone pad to enter the handset number you want to call.

Three-Way Calling

1. During an external call, press the del/conf/intercom button. **LINE ON HOLD EXTENSION?** shows in the display.

2. Use the touch-tone pad to select Handset #. You will hear a paging tone and **PAGING** shows in the originating handset's display.

NOTE: **PAGING FROM...** shows in the display on the receiving handset, and the receiving handset presses the del/conf/intercom or talk button to answer the intercom.

Intercom Operation

3. Continue to hold the page button until the in use indicator flashes rapidly.

Registration

4. Release the page button.

5. Press and release the page button on the base once. All handsets are de-registered and **HANDSET NEEDS REGISTRATION** shows in the display.

The provisions of this written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation, and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties and other rights and remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.

If you are unable to find a qualified servicer for out of warranty service, you may write to:

Thomson Digital Technologies Ltd.
c/o Thomson Inc.
P.O. Box 0944
Indianapolis, Indiana, U.S.A., 46206-0944

Attach your sales receipt to this booklet for future reference. This information is required if service is needed during the warranty period.

PURCHASE DATE _____
NAME OF STORE _____

Registration

YOU MUST REGISTER THE HANDSET TO THE MAIN BASE BEFORE USE!

YOU MUST REGISTER THE HANDSET TO THE MAIN BASE BEFORE USE!

After the optional handset has charged for 12 hours on the extra charger, **HANDSET NEEDS REGISTRATION** shows in the display.

NOTE: The receiving handset presses the del/conf/intercom button to answer the intercom call. Both intercom users may speak privately. The external caller will not hear the intercom conversation.

The provisions of this written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation, and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties and other rights and remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.

If you are unable to find a qualified servicer for out of warranty service, you may write to:


Thomson Digital Technologies Ltd.
c/o Thomson Inc.
P.O. Box 0944
Indianapolis, Indiana, U.S.A., 46206-0944

Attach your sales receipt to this booklet for future reference. This information is required if service is needed during the warranty period.

PURCHASE DATE _____
NAME OF STORE _____

Parts Checklist

Make sure your package includes the items shown here.

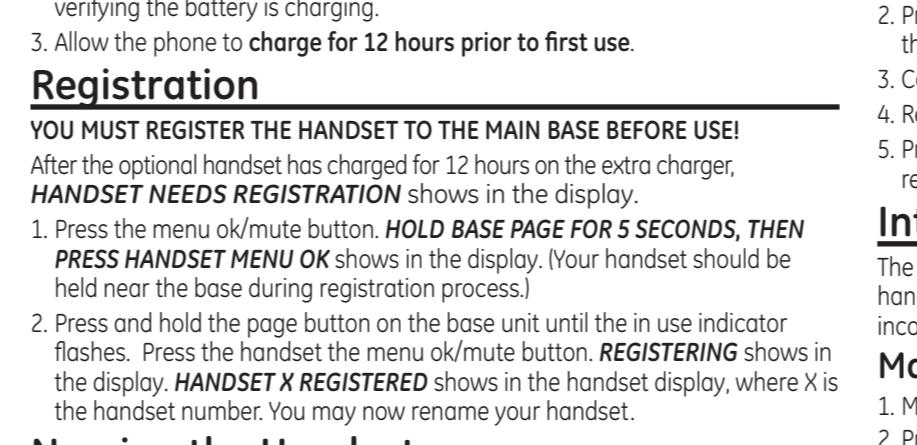

Registration

1. Press the menu ok/mute button. **HOLD BASE PAGE FOR 5 SECONDS, THEN PRESS HANDSET MENU OK** shows in the display. (Your handset should be held near the base during registration process.)

Registration

2. Press and hold the page button on the base unit until the in use indicator flashes. Press the handset menu ok/mute button. **REGISTERING** shows in the display. **HANDSET X REGISTERED** shows in the handset display, where X is the handset number. You may now rename your handset.

NOTE: **PAGING FROM...** shows in the display on the receiving handset, and the receiving handset presses the del/conf/intercom or talk button to answer the intercom.

The provisions of this written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation, and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties and other rights and remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.

If you are unable to find a qualified servicer for out of warranty service, you may write to:

Thomson Digital Technologies Ltd.
c/o Thomson Inc.
P.O. Box 0944
Indianapolis, Indiana, U.S.A., 46206-0944

Attach your sales receipt to this booklet for future reference. This information is required if service is needed during the warranty period.

PURCHASE DATE _____
NAME OF STORE _____

Naming the Handset

1. Use the touch-tone pad to enter a name (up to 15 characters).

Naming the Handset

NOTE: If you make a mistake, use the del/conf/intercom button to backspace and delete one character at a time.

NOTE: To cancel page, press the del/conf/intercom button again or the end button on the sending handset.

The provisions of this written warranty are in addition to and not a modification of or subtraction from the statutory warranties and other rights and remedies contained in any applicable legislation, and to the extent that any such provisions purport to disclaim, exclude or limit any such statutory warranties and other rights and remedies, such provisions shall be deemed to be amended to the extent necessary to comply therewith.

If you are unable to find a qualified servicer for out of warranty service, you may write to:

Thomson Digital Technologies Ltd.
c/o Thomson Inc.
P.O. Box 0944
Indianapolis, Indiana, U.S.A., 46206-0944

Attach your sales receipt to this booklet for future reference. This information is required if service is needed during the warranty period.

PURCHASE DATE _____
NAME OF STORE _____

Making an Intercom Call

2. Use the touch-tone pad to enter a name (up to 15 characters).

Making an Intercom Call

NOTE: If you make a mistake, use the del/conf/intercom button to backspace and delete one character at a time.

NOTE: A handset can enter conference mode directly by pressing talk or speaker on

Guide Rapide de Configuration du Optionnel/Supplémentaire Modèle 28106 DECT 6.0 Combiné Mince



pour utilisation avec les Systèmes de Séries 28115 et 28118

THOMSON
images & beyond

Modèle 28106
00019387 (Rév. 0 CAN E/F)
07-15
Imprimé en Chine

Thomson Digital Technologies Ltd.
© 2007 Thomson Digital Technologies Ltd.
Trademark(s) ® Registered
Marque(s) ® déposés

Renseignements Importants

AVIS: Ce produit est conforme aux spécifications techniques applicables d'Industrie Canada. Son fonctionnement est soumis aux deux conditions suivantes : (1) Cet appareil ne peut causer de l'interférence, et (2) Cet appareil doit accepter toute interférence, y compris l'interférence pouvant entraîner le fonctionnement non souhaitable de l'appareil. Avant d'installer cet appareil, l'utilisateur doit vérifier s'il est permis de le raccorder aux installations de la compagnie locale de télécommunications. L'installation doit de plus respecter les méthodes de raccordement approuvées. L'abonné doit savoir que le respect des conditions mentionnées ci-dessus n'empêche pas nécessairement la détérioration du service dans certaines situations. La réparation des appareils certifiés doit être confiée à un service de maintenance canadien dûment autorisé, désigné par le fournisseur. Toute réparation ou modification effectuée par l'utilisateur peut amener la compagnie à exiger le débranchement de l'installation. Par mesure de sécurité, les utilisateurs doivent s'assurer du raccordement réciproque des circuits de mise à la terre du service public d'énergie, des lignes téléphoniques et — s'il y a lieu — des systèmes intérieurs de conduites d'eau métalliques. Cette précaution peut s'imposer particulièrement dans les régions rurales.

ATTENTION: Les utilisateurs ne doivent pas essayer de faire eux-mêmes ces raccordements. Ils doivent communiquer avec le service d'inspection compétent ou faire appel à un électricien, selon le cas.

NOTES: Cet appareil ne peut être utilisé pour le service payant (monnaie) fourni par la compagnie de téléphone.

Renseignements sur L'interférence

Cet appareil produit et utilise l'énergie radiofréquence qui peut gêner la réception radio et télévision résidentielle s'il n'est pas installé ou utilisé conformément aux instructions contenues dans ce guide. Une protection raisonnable est assurée contre une telle interférence, mais rien ne garantit qu'un appareil donné ne produira pas d'interférence. Si on soupçonne et confirme une interférence d'une ou plus des façons suivantes : réorienter l'antenne du récepteur radio ou télévision, éloigner l'appareil du récepteur ou brancher l'appareil et le récepteur dans des prises de circuits différents. L'utilisateur peut aussi demander conseil à un technicien en radio-télévision compétent. Cet appareil a été mis à l'essai et répond à toutes les limites des appareils informatiques de Classe B, conformément à l'alinea 15, des Règlements de la FCC.

Compatibilité avec les Prothèses Auditives

Ce téléphone est conforme aux normes FCC/Industrie Canada en matière de compatibilité avec les prothèses auditives.

Énonce sur L'exposition au Rayonnement RF de la FCC

Cet équipement est conforme aux limites d'exposition au rayonnement RF de la FCC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé en maintenant une distance minimale de 20 centimètres entre le radiateur et votre corps. Cet émetteur ne doit pas être placé ou utilisé avec une autre antenne ou un autre émetteur.

Introduction

ATTENTION : Vous devez respecter certaines règles de sécurité lorsque vous utilisez un appareil téléphonique. Reportez-vous aux INSTRUCTIONS IMPORTANTES DE SÉCURITÉ qui accompagnent ce produit et conservez-les pour référence ultérieure.

IMPORTANT: Étant donné que les téléphones sans cordon fonctionnent à l'électricité, vous devriez disposer d'au moins un téléphone avec cordon dans la maison, en cas de panne de courant.

REMARQUE: Si vous avez acheté un combiné supplémentaire pour votre système original, vous trouverez une description de ses fonctionnalités dans le livret d'instructions accompagnant votre appareil d'origine.

Si vous avez acheté un combiné supplémentaire pour votre système original, vous trouverez une description de ses fonctionnalités dans le livret d'instructions accompagnant votre appareil d'origine.

NOTES: Cet appareil ne peut être utilisé pour le service payant (monnaie) fourni par la compagnie de téléphone.

Renseignements sur L'interférence

Cet appareil produit et utilise l'énergie radiofréquence qui peut gêner la réception radio et télévision résidentielle s'il n'est pas installé ou utilisé conformément aux instructions contenues dans ce guide. Une protection raisonnable est assurée contre une telle interférence, mais rien ne garantit qu'un appareil donné ne produira pas d'interférence. Si on soupçonne et confirme une interférence d'une ou plus des façons suivantes : réorienter l'antenne du récepteur radio ou télévision, éloigner l'appareil du récepteur ou brancher l'appareil et le récepteur dans des prises de circuits différents. L'utilisateur peut aussi demander conseil à un technicien en radio-télévision compétent. Cet appareil a été mis à l'essai et répond à toutes les limites des appareils informatiques de Classe B, conformément à l'alinea 15, des Règlements de la FCC.

Compatibilité avec les Prothèses Auditives

Ce téléphone est conforme aux normes FCC/Industrie Canada en matière de compatibilité avec les prothèses auditives.

Énonce sur L'exposition au Rayonnement RF de la FCC

Cet équipement est conforme aux limites d'exposition au rayonnement RF de la FCC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé en maintenant une distance minimale de 20 centimètres entre le radiateur et votre corps. Cet émetteur ne doit pas être placé ou utilisé avec une autre antenne ou un autre émetteur.

Installation de la Pile du Combiné

REMARQUE: Vous devez brancher la pile du combiné avant de l'utiliser.

ATTENTION: Pour réduire le risque d'incendie ou de blessures, utilisez seulement la batterie approuvée par Thomson Inc. de pile au lithium du modèle 5-2770 ou 5-2762, qui est compatible avec cette unité.

IMPORTANT: Étant donné que les téléphones sans cordon fonctionnent à l'électricité, vous devriez disposer d'au moins un téléphone avec cordon dans la maison, en cas de panne de courant.

REMARQUE: Si vous avez acheté un combiné supplémentaire pour votre système original, vous trouverez une description de ses fonctionnalités dans le livret d'instructions accompagnant votre appareil d'origine.

AVERTISSEMENT: Il n'est pas recommandé de désenregistrer un combiné à moins que cela ne soit absolument nécessaire parce qu'un combiné est désenregistré, que les fonctions du combiné sont inutilisables tant que le combiné n'a pas été réenregistré.

REMARQUE: Pour assurer une installation correcte de la pile, le connecteur est claveté et ne peut être inséré que dans une seule position.

4. Choisissez NON pour ne pas désenregistrer.

5. Si vous choisissez 1OUI, appuyez sur le bouton menu ok/mute; SE RAPPROCH BASE est affiché pendant 2 secondes, puis CONFIRMER? 1 OUI 2 NON est affiché.

6. Appuyez sur le clavier numérique pour choisir 1 pour OUI ou 2 pour NON, ou utilisez le bouton vol/CID (▾ ou ▾) pour atteindre 1OUI ou 2NON.

7. Si vous choisissez OUI, appuyez sur le bouton menu ok/mute pour confirmer. DESENREGISTRE... est affiché. Vous entendrez une tonalité de confirmation. COMBINE X DESENREGISTRE est ensuite affiché pour confirmer que le combiné est désenregistré.

REMARQUE: Une fois le désenregistrement terminé, BESOINS COMBIN ENREGISTREMENT apparaît dans l'afficheur. Vous devez enregistrer le combiné avant de l'utiliser.

Désenregistrement Global

Si un ou plusieurs des combinés sont perdus, vous devez désenregistrer tous les combinés pour assurer le bon fonctionnement du système. Suivez les étapes ci-dessous pour désenregister les deux combinés en même temps.

REMARQUE: Avant de communiquer par interphone/rechercher un autre combiné, vous devez décider si vous souhaitez converser à deux ou à trois.

Socle de chargement de combiné

AVERTISSEMENT: Il n'est pas recommandé de désenregister un combiné à moins que cela ne soit absolument nécessaire parce qu'un combiné est désenregistré, que les fonctions du combiné sont inutilisables tant que le combiné n'a pas été réenregistré.

REMARQUE: Le adaptateur de courant fourni avec cet appareil doit être placé correctement en position verticale ou monté sur le sol.

1. Branchez le cordon d'alimentation CA du socle de recharge supplémentaire à une prise électrique.

REMARQUE: Le adaptateur de courant fourni avec cet appareil doit être placé correctement en position verticale ou monté sur le sol.

2. Placez le combiné sur le socle de recharge supplémentaire. L'indicateur de charge s'allume pour vérifier si la pile se recharge.

3. Prévoyez un temps de charge de 12 heures avant la première utilisation.

Enregistrement

VOUS DEVEZ ENREGISTRER LES DEUX COMBINÉS SUR LE POSTE DE BASE AVANT DE LES UTILISER!

Après le combiné facultatif a facturé 12 heures sur le chargeur supplémentaire, BESOINS COMBIN ENREGISTREMENT apparaît dans l'afficheur.

REMARQUE: RECHERCHE DE... est affiché au combiné récepteur et à la personne à ce combiné doit appuyer sur le bouton del/conf/intercom ou talk pour répondre à l'appel par interphone.

Faire un Appel D'interphone

1. Pendant un appel extérieur, appuyez sur le bouton del/conf/intercom. LIGNE EN GARDE POSTE? apparaît dans l'afficheur.

2. Utilisez le clavier numérique pour choisir le Combiné 1 ou le Combiné 2. Vous entendez une tonalité de recherche et RECHERCHE est affiché au combiné d'origine.

REMARQUE: RECHERCHE DE... est affiché au combiné récepteur et à la personne à ce combiné doit appuyer sur le bouton del/conf/intercom ou talk pour répondre à l'appel par interphone.

Nom du Combiné

1. Utilisez le clavier pour entrer un nom (jusqu'à 15 caractères).

REMARQUE: Si vous faites une erreur, appuyez sur le bouton del/conf/intercom pour reculer en effacez le caractère(s) ou les noms faux.

2. Appuyez sur le bouton menu ok/mute pour sauvegarder. Vous entendrez une tonalité de confirmation et les expositions de nom de combiné dans l'affichage.

Désenregistrement

REMARQUE: Vous devez brancher la pile du combiné avant de l'utiliser.

ATTENTION: Pour réduire le risque d'incendie ou de blessures, utilisez seulement la batterie approuvée par Thomson Inc. de pile au lithium du modèle 5-2770 ou 5-2762, qui est compatible avec cette unité.

IMPORTANT: Étant donné que les téléphones sans cordon fonctionnent à l'électricité, vous devriez disposer d'au moins un téléphone avec cordon dans la maison, en cas de panne de courant.

REMARQUE: Si le combiné récepteur ne répond pas dans les deux minutes, l'appel par interphone est automatiquement annulé. Le combiné d'origine affiche AUCUNE REPONSE.

Du menu d'installation de combiné:

1. Appuyez sur le bouton vol/CID (▾ ou ▾) pour obtenir le sub-menu DÉSENREGISTREMENT.

5. Quand vous avez terminé, appuyez sur le bouton end ou le bouton del/conf/intercom de l'un ou l'autre combiné pour désactiver l'interphone.

6. Appuyez sur le bouton menu ok/mute DESENREGISTREM 1OUI ▶ 2NON ▶

3. Utilisez le clavier numérique pour choisir 1 pour OUI ou 2 pour NON. Ou utilisez le bouton vol/CID (▾ ou ▾) pour atteindre 1OUI ou 2NON.

4. Repérez la pile et le couvercle du compartiment de la pile qui sont emballés ensemble dans un sac de plastique séparément du combiné.

5. Repérez le compartiment de la pile à l'arrière du combiné.

6. Raccordez le connecteur de la pile dans la prise située à l'intérieur du compartiment.

7. Repérez la pile et le couvercle du compartiment de la pile qui sont emballés ensemble dans un sac de plastique séparément du combiné.

8. Repérez le compartiment de la pile à l'arrière du combiné.

9. Raccordez le connecteur de la pile dans la prise située à l'intérieur du compartiment.

10. Repérez la pile et le couvercle du compartiment de la pile qui sont emballés ensemble dans un sac de plastique séparément du combiné.

11. Repérez le compartiment de la pile à l'arrière du combiné.

12. Raccordez le connecteur de la pile dans la prise située à l'intérieur du compartiment.

13. Repérez la pile et le couvercle du compartiment de la pile qui sont emballés ensemble dans un sac de plastique séparément du combiné.

14. Repérez le compartiment de la pile à l'arrière du combiné.

15. Raccordez le connecteur de la pile dans la prise située à l'intérieur du compartiment.

16. Repérez la pile et le couvercle du compartiment de la pile qui sont emballés ensemble dans un sac de plastique séparément du combiné.

17. Repérez le compartiment de la pile à l'arrière du combiné.

18. Raccordez le connecteur de la pile dans la prise située à l'intérieur du compartiment.

19. Repérez la pile et le couvercle du compartiment de la pile qui sont emballés ensemble dans un sac de plastique séparément du combiné.

20. Repérez le compartiment de la pile à l'arrière du combiné.

21. Raccordez le connecteur de la pile dans la prise située à l'intérieur du compartiment.

22. Repérez la pile et le couvercle du compartiment de la pile qui sont emballés ensemble dans un sac de plastique séparément du combiné.

23. Repérez le compartiment de la pile à l'arrière du combiné.

24. Raccordez le connecteur de la pile dans la prise située à l'intérieur du compartiment.

25. Repérez la pile et le couvercle du compartiment de la pile qui sont emballés ensemble dans un sac de plastique séparément du combiné.

26. Repérez le compartiment de la pile à l'arrière du combiné.

27. Raccordez le connecteur de la pile dans la prise située à l'intérieur du compartiment.

28. Repérez la pile et le couvercle du compartiment de la pile qui sont emballés ensemble dans un sac de plastique séparément du combiné.

29. Repérez le compartiment de la pile à l'arrière du combiné.

30. Raccordez le connecteur de la pile dans la prise située à l'intérieur du compartiment.

Battery Safety Precautions

- Do not burn, disassemble, mutilate, or puncture. Like other batteries of this type, toxic materials could be released which can cause injury.
- To reduce the risk of fire or personal injury, use only the Lithium battery listed in the User's Guide.
- Keep batteries out of the reach of children.
- Remove batteries if storing over 30 days.

REMARQUE: Le sceau RBRC (Société de recyclage des piles rechargeables) sur la pile de cet appareil Thomson signale que nous participons à un programme de collecte et de recyclage des piles rechargeables. Pour plus de renseignements, allez sur le site www.rbr.org/cellarecycle/, ouappelez au 1-800-8-BATTERY ou contactez votre centre de recyclage.

Service Après-vente